
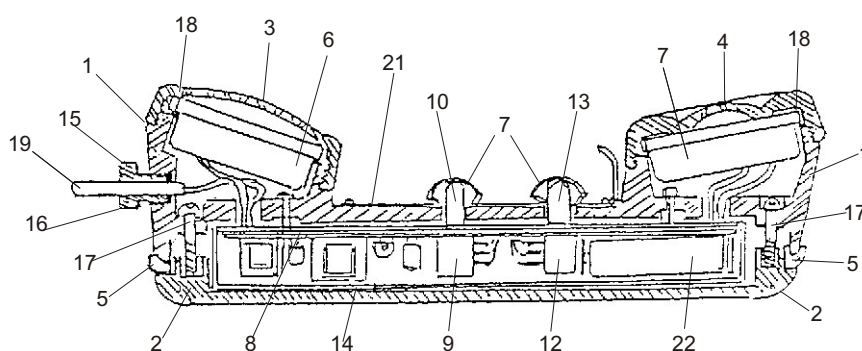
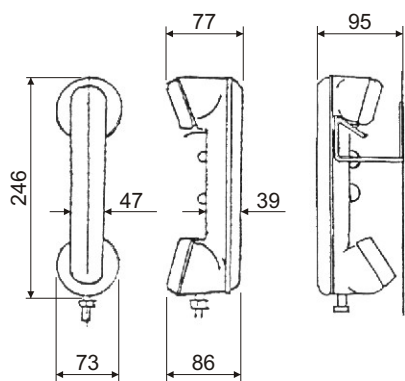


- 1 Handset body
- 2 Handset cover
- 3 Mouthpiece
- 4 Earpiece
- 5 Cover packing
- 6 Transmitter capsule (CE-2)
- 7 Receiver capsule (CE-2)
- 8 Printed circuit board
- 9 Talk button switch
- 10 Talk push button
- 11 Rubber cap (grey/black)
- 12 Call button switch
- 13 Call push button
- 14 Chassis case
- 15 Gland
- 16 Gland packing
- 17 Cover fixing screw
- 18 Capsule packing
- 19 Coiled cable
- 20 Line connector
- 21 Operation panel
- 22 Batteries: "AA" x 2

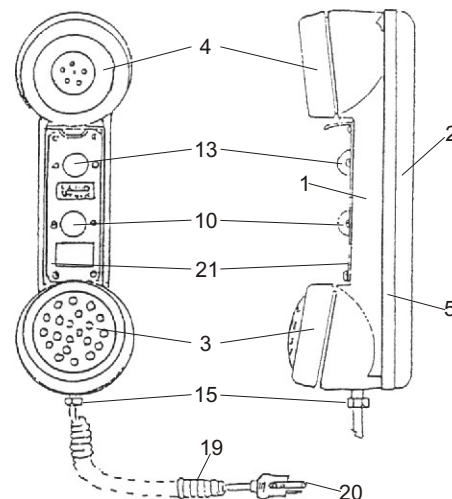

CHANGING BATTERIES

When the battery power gets low, the buzzer sound will get weaker. To replace the batteries, unscrew the mouth piece (3) and ear piece (4), and take out the transmitter capsule (6) and receiver capsule (7) together with their connecting wires. Then remove two handset-coverfixing screws (17) to take off the cover. Remove chassis case (14) to replace the batteries with new ones, making sure the polarities are correctly matched. Although the battery life depends on usage, they may last more than 6 months in typical use.

ACCESSORIES



Clamp connector
TS105
code 8319825

Flat cable
TS104
code 8319826

Weather-proof jack plug
code 2964156

Weather-proof socket
code 2964088

Description	Type	Code
Handphone	TLP 97	7147102

I dati riportati in questa pubblicazione non sono impegnativi e possono venire modificati senza preavviso. The information contained in this publication are not binding and are subject to change without notice.